


# RAY-BAR INSULATED GLASS UNITS: IGU's WITH "BETWEEN THE GLASS" INTEGRAL MINI-BLINDS HANDLING AND CARE INSTRUCTIONS

## IMPORTANT

- ALWAYS KEEP ASSEMBLY VERTICAL AND POSITIONED UPRIGHT AT ALL TIMES
- NEVER DROP UNIT, AND NEVER LAY UNIT FLAT AS ASSEMBLY FUNCTIONS MAY JAM
- NEVER SET MINI BLIND ASSEMBLY ON ITS SIDE AS THIS MAY BEND THE THIN BLADE SLATS.
- IF "LIFT AND TILT" FUNCTIONS: ALWAYS SET IN RAISED POSITION FOR TRANSIT OR STORAGE
- IF "TILT-ONLY" FUNCTION: KEEP BLINDS CLOSED FOR TRANSIT OR STORAGE
- NEVER FORCE UNIT TO OPERATE IN ANY MOVEMENT OR FUNCTION

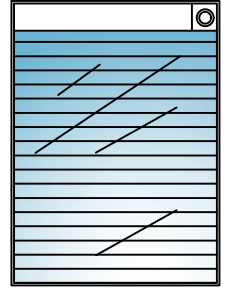

## GENERAL USE

### IF "TILT ONLY" FUNCTION

- SMOOTHLY ROTATE DIAL OR ROD OPERATOR CONTROL TO TILT SLATS OPEN OR CLOSED
- TO REVERSE, ROTATE DIAL OR ROD IN OPPOSITE CLOCKWISE/COUNTER-CLOCKWISE DIRECTION

NEVER SET



ON SIDE!

### IF "LIFT AND TILT" FUNCTIONS

- SMOOTHLY ROTATE DIAL OR ROD OPERATOR CONTROL TO TILT
- CONTINUE TO ROTATE OPERATOR CONTROL UNTIL TRANSITIONING TO LIFT FUNCTION
- TO REVERSE, ROTATE DIAL OR ROD IN OPPOSITE CLOCKWISE/COUNTER-CLOCKWISE DIRECTION

## CARE


- KEEP GLASS CLEAN WITH GLASS CLEANER AND SOFT MICROFIBER CLOTH
- NEVER FORCE ANY OPERATION
- NEVER HIT OR IMPACT UNIT ASSEMBLY

## FUNCTION SOLUTIONS

- IF BLINDS APPEAR CROOKED SIMPLY FULLY LIFT TO UP POSITION AND BACK DOWN TO LEVEL
- IF SLATS ARE JAMMED OR STUCK, LIGHTLY / GENTLY TAP ON UNIT TO FREE UP SLATS
- ALLOW TO REST 24 TO 48 HOURS IF BLINDS NOT PROPERLY FUNCTIONING IN ANY OF THE FOLLOWING 4 CONDITIONS: EXTREME COLD OR HOT WEATHER / RAPID CHANGES IN TEMPERATURE / RAPID CHANGE IN PRESSURE

N.T.S.

Terms of Use: Certain designs and concepts are the exclusive proprietary property and work product of Ray-Bar Engineering provided in good faith as a courtesy for the architectural design of projects specifying, incorporating and utilizing genuine Ray-Bar products and assemblies. Ray-Bar designs are not to be copied, altered, plagiarized or utilized in any competitive or detrimental manner against Ray-Bar as protected by law and/or copyrights. "All Rights Reserved"

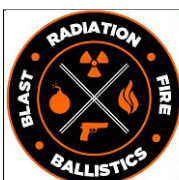

PROPRIETARY DESIGN

JOB NAME:

LOCATION:

ROOM NUMBER:

SHEET \_\_\_\_ OF \_\_\_\_:

RAY-BAR IGU's WITH MINI BLINDS UNITS 3D DETAIL

**RAY-BAR ENGINEERING CORP.**

Toll Free: 1(800) 444-XRAY / 1(800) 444-9729

Telephone: (626) 969-1818

24 Hour Fax: 1(800) 333-XRAY /

1(800) 333-9729

website: www.raybar.com

RAY-BAR  
INTEGRAL  
MINI-BLINDS

3-D  
RB-MB-IGU