


HAZARDOUS GLAZING LOCATIONS REQUIRING IMPACT RESISTANT SAFETY GLASS PER IBC 2406

RAY-BAR X-RAY SAFETY GLASS OR FIRE RATED GLASS

ALL GLAZING OCCURRING IN DOOR VISION FRAMES MUST BE IMPACT RESISTANT SAFETY GLAZING.

ANY WINDOW THAT OCCURS WITHIN 24" OF A DOOR OPENING MUST BE IMPACT RESISTANT SAFETY GLAZING AND PROPERLY LABELED.

ANY WINDOW THAT OCCURS WITHIN 18" OF FLOOR MUST BE IMPACT RESISTANT SAFETY GLAZING AND PROPERLY LABELED.

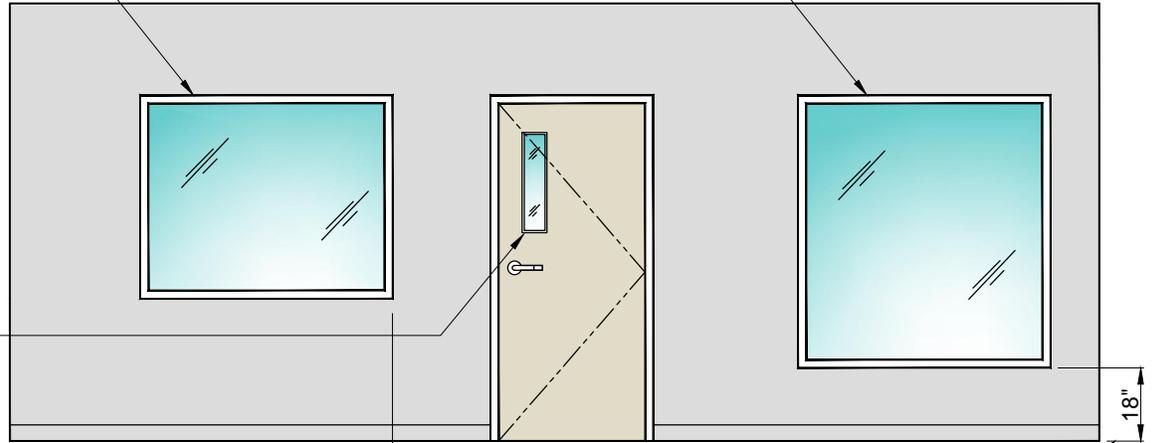

RAY-BAR X-RAY SAFETY GLASS OR FIRE RATED GLASS IS PERMANENTLY LABELED AS MEETING ANSI Z97.1 AND CPSC 16 CFR PART 1201 CAT 2 AS REQUIRED BY IBC 2406 FOR IMPACT RESISTANCE.

THIS IS NOT REQUIRED TO BE A "TEMPERED" PRODUCT.

THIS PRODUCT IS TO BE UTILIZED BY CUSTOMER IN RISK AREAS AND LOCATIONS TO "REDUCE OR MINIMIZE THE LIKELIHOOD OF CUTTING AND PIERCING INJURIES WHEN SAID GLAZING MATERIAL IS BROKEN BY HUMAN CONTACT".

• CONTACT RAY-BAR ENGINEERING CORP. AT (800) 444-9729 OR SALES@RAYBAR.COM FOR THE FOLLOWING SAFETY GLASS PRODUCTS:

- X-RAY SAFETY GLASS • FIRE RATED GLASS • BULLET RESISTANT GLASS •
- FIRELITE-NT • FIRELITE+PLUS • WIRELITE-NT • FIRE GLASS 20 • PYROSTOP •

PHONE: (800) 444-9729 • E-MAIL: SALES@RAYBAR.COM

Terms of Use: Certain designs and concepts are the exclusive proprietary property and work product of Ray-Bar Engineering provided in good faith as a courtesy for the architectural design of projects specifying, incorporating and utilizing genuine Ray-Bar products and assemblies. Ray-Bar designs are not to be copied, altered, plagiarized or utilized in any competitive or detrimental manner against Ray-Bar as protected by law and/or copyrights. "All Rights Reserved"

	JOB NAME:
	LOCATION:
	ROOM NUMBER:
	SHEET ____ OF ____:
	RAY-BAR SAFETY GLASS CODE LOCATION REQUIREMENTS

RAY-BAR ENGINEERING CORP.		SCALE N.T.S. RAY-BAR X-RAY SAFETY GLASS
Toll Free: 1(800) 444-XRAY / 1(800) 444-9729		
Telephone: (626) 969-1818		
24 Hour Fax: 1(800) 333-XRAY / 1(800) 333-9729		
website: www.raybar.com		