


RAY-BAR ENGINEERING CORPORATION

LEAD LINED SHIELDED ACCESS DOOR PANELS

STANDARD LEAD
SHIELDING
1/16" / 4# / 1.6mm

* HIGHER LEVELS
AVAILABLE UPON
REQUEST

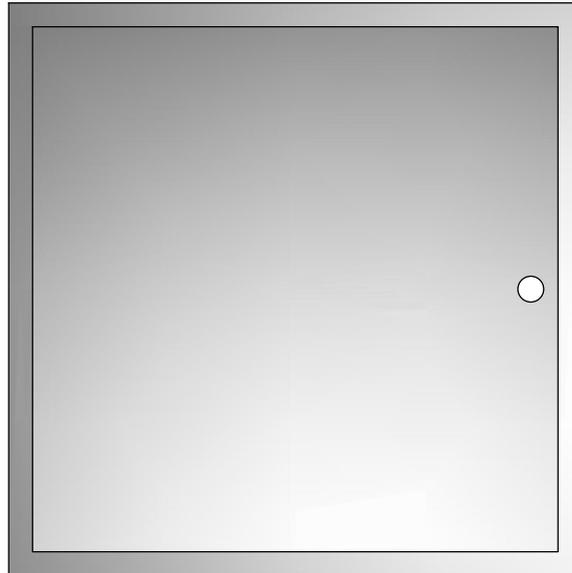

STANDARD

12" X 12"
18" X 18"
24" X 24"

GOOD IN STOCK
AVAILABLE IN ONLY 3 DAYS

- RAY-BAR LEAD LINED 16 OR 14 GAUGE STEEL ACCESS PANELS ARE AVAILABLE IN A VARIETY OF STANDARD SIZES AND PROFILES FOR USE IN MAINTENANCE ACCESS INTO SHIELDED WALLS, PARTITIONS OR CEILINGS FOR NEW INSTALLATIONS OR RETROFIT APPLICATIONS.
- ACCESS PANELS ARE PRIMERED AND READY TO PAINT (OR OPTIONALLY AS STAINLESS STEEL).
- STANDARD SIZES ARE: 12"X12", 14"X14", 16"X16", 18"X18" AND 24"X24".
- CUSTOM SIZES ARE ALSO AVAILABLE UPON REQUEST.
- ACCESS PANELS ARE LEAD LINED WITH SAME LEAD THICKNESS VALUE AS THE SHIELDED PARTITION, WALL OR CEILING THEY OCCUR IN, AS PER NCRP (CUSTOMER MUST VERIFY).
- STANDARD SLOT LATCH OR OPTIONAL KEYED LOCK LATCH AVAILABLE.
- STANDARD LEAD THICKNESS VALUES ARE: 1/64", 1/32", 3/64", 1/16", 5/64", 3/32", AND 1/8"
- OPTIONALLY RAY-BAR CAN LEAD LINE CUSTOMER FURNISHED ACCESS PANELS.
- AVAILABLE FIRE RATED UP TO 1-1/2 HOUR (90 MIN) "B" LABEL, MEETING ANSI-UL 10B STANDARD.
- * IT IS CUSTOMER'S RESPONSIBILITY TO VERIFY LEAD SHIELDING REQUIREMENTS PRIOR TO ORDERING.

RAY-BAR ENGINEERING CORPORATION
PHONE (800) 444-XRAY
E-MAIL: SALES@RAYBAR.COM
WWW.RAYBAR.COM



" WHEN PROTECTION IS REQUIRED, THERE IS NO SUBSTITUTE FOR SKILL AND EXPERIENCE"