


RAY - BAR SHIELDED SCREW CAP COVER KITS

Ray-Bar's exclusive Shielded Screw Cap Covers are utilized for safely shielding and encapsulating new screw penetrations into existing lead shielded walls, partitions or when adding cabinets or other surface mounted accessories into completed lead shielded walls, partitions or barriers and provide an easy to install retro-fit option in meeting the required lead shielding while also safely encapsulating both the 1/16" / 4# / 1.6mm lead shield and screw head penetration in an aesthetically pleasing hinged and locking PVB cap.

EACH KIT CONTAINS:

25 EACH MEDIUM SIZE
25 EACH LARGE SIZE
(1.6MM SHIELDED WHITE COLOR)

BASE WASHER
WITH SCREW HOLE

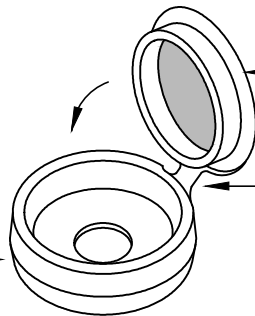


WHITE COLOR PVC DOMED
LOCKING HINGED 1.6MM
SHIELDED CAP COVER

HINGE

**EACH KIT CONTAINS: 1/16" / 4# / 1.6MM SHIELDED WHITE PVC SCREW CAPS,
25 MEDIUM & 25 LARGE SIZE**


INSTALLATION OF RAY-BAR SHIELDED SCREW CAP COVERS

POSITION
CAP




HOLD CAP IN PLACE SET
AT DESIRED LOCATION

FASTEN
SCREW



SCREW INTO CAP THRU
BASE HOLE INTO WALL

CLOSE CAP
OVER SCREW
HEAD



SNAP CAP COVER
CLOSED AND LOCK TIGHT

- AVAILABLE IN 1 COLOR: STANDARD WHITE
- AVAILABLE IN 1 SHIELDING LEVEL: 1/16" / 4# / 1.6mm
- AVAILABLE IN 2 SIZES: STANDARD MEDIUM (6 , 8) LARGE (10 , 12) 25 EACH PER KIT.

ACCEPTABLE SCREW HEADS:



BUGLE



FLAT



PAN



OVAL

X NOT RECOMMENDED FOR:



HEX



SOCKET



HEX WASHER

* SCREWS AND FASTENERS ARE **NOT** INCLUDED WITH SCREW CAP COVERS

- • CUSTOMER IS RESPONSIBLE TO VERIFY SHIELDING REQUIREMENT PRIOR TO ORDERING.
- • SHIELDING MUST BE SAME OR GREATER THAN WALL/PARTITION THAT CAP WILL OCCUR IN.
- • ALL SHIELDING MUST BE CALCULATED BY A QUALIFIED RADIATION PHYSICIST.

*** PVC SCREW CAP COVERS CAN BE PAINTED WITH KRYLON FUSION SPRAY PAINT FOR PLASTICS ***

Terms of Use: Certain designs and concepts are the exclusive proprietary property and work product of Ray-Bar Engineering provided in good faith as a courtesy for the architectural design of projects specifying, incorporating and utilizing genuine Ray-Bar products and assemblies. Ray-Bar designs are not to be copied, altered, plagiarized or utilized in any competitive or detrimental manner against Ray-Bar as protected by law and/or copyrights. "All Rights Reserved"



JOB NAME:
LOCATION:
ROOM NUMBER:
SHEET ____ OF ____:

RAY BAR SHIELDED SCREW CAP COVER KITS

RAY-BAR ENGINEERING CORP.

Toll Free: 1(800) 444-XRAY / 1(800) 444-9729
Telephone: (626) 969-1818
24 Hour Fax: 1(800) 333-XRAY /
1(800) 333-9729

www.raybar.com

NTS

RAY-BAR
SHIELDED
CAP COVER
KITS