


RAY-BAR FIRE RATED LEAD LINED VISION FRAME WITH IGU

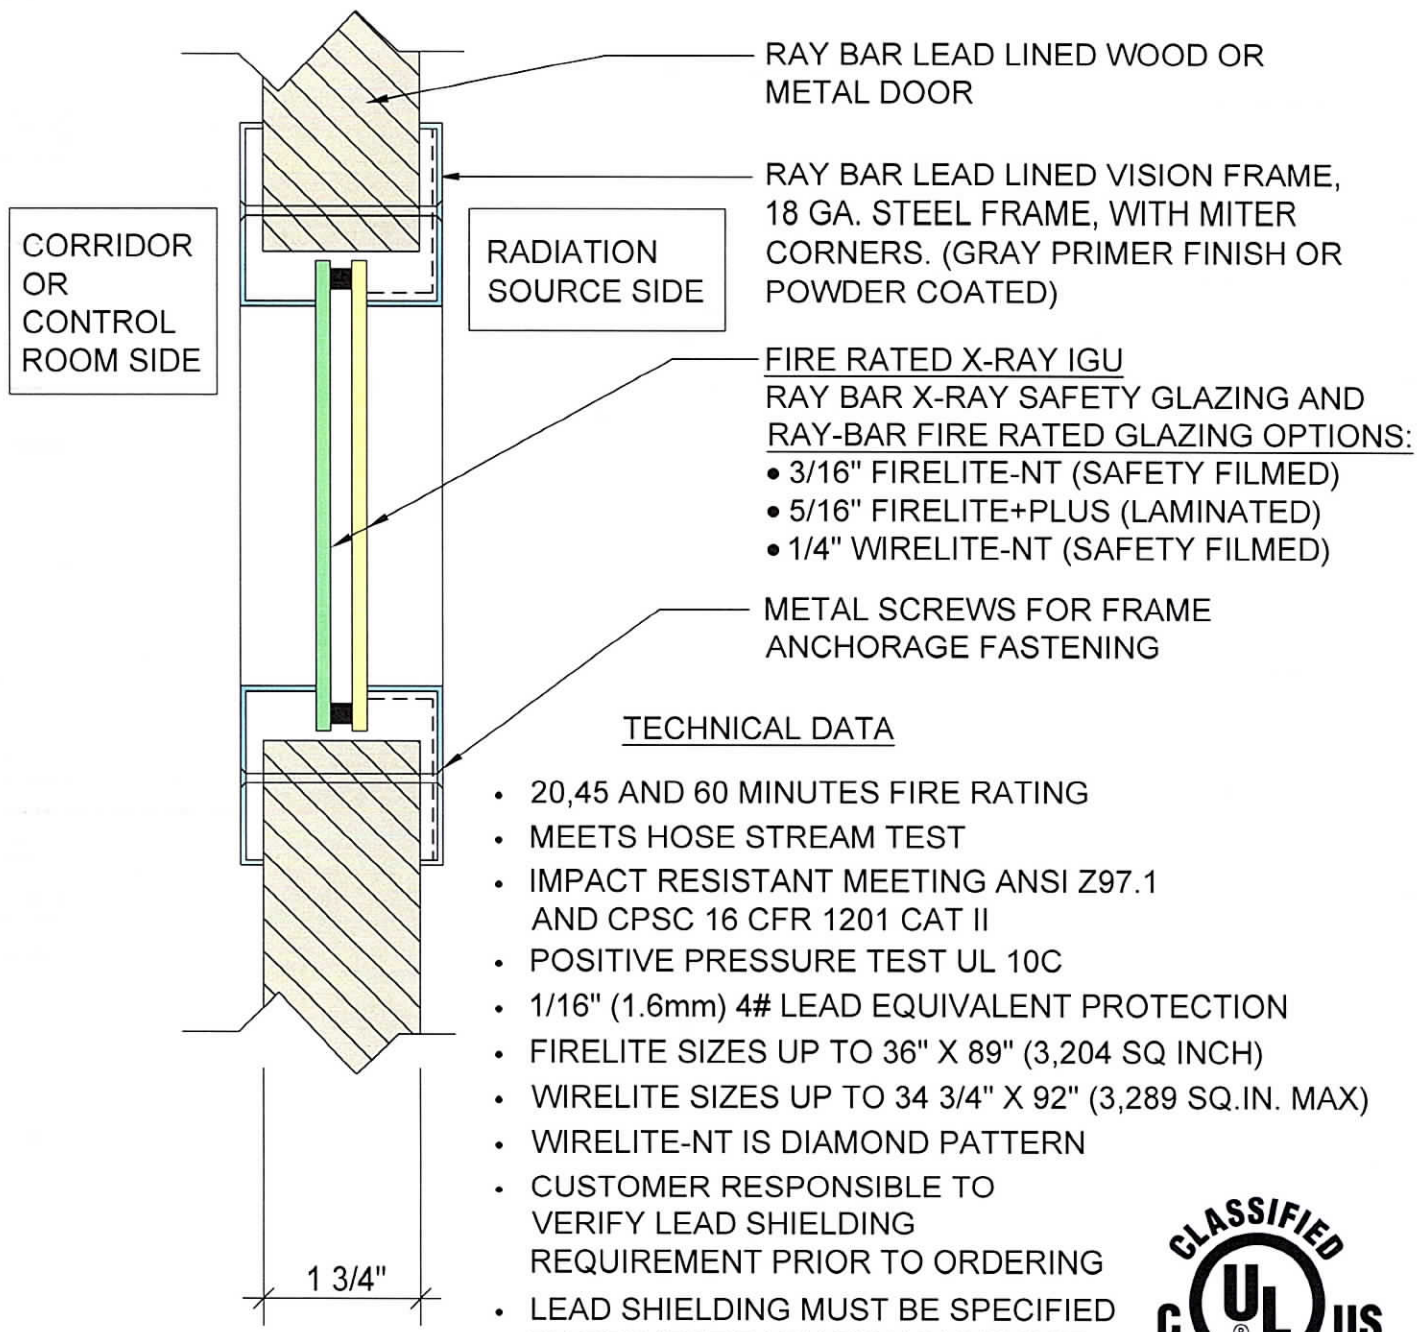

RAY BAR LEAD LINED WOOD OR METAL DOOR

RAY BAR LEAD LINED VISION FRAME, 18 GA. STEEL FRAME, WITH MITER CORNERS. (GRAY PRIMER FINISH OR POWDER COATED)

FIRE RATED X-RAY IGU
RAY BAR X-RAY SAFETY GLAZING AND RAY-BAR FIRE RATED GLAZING OPTIONS:

- 3/16" FIRELITE-NT (SAFETY FILMED)
- 5/16" FIRELITE+PLUS (LAMINATED)
- 1/4" WIRELITE-NT (SAFETY FILMED)

METAL SCREWS FOR FRAME ANCHORAGE FASTENING

TECHNICAL DATA

- 20,45 AND 60 MINUTES FIRE RATING
- MEETS HOSE STREAM TEST
- IMPACT RESISTANT MEETING ANSI Z97.1 AND CPSC 16 CFR 1201 CAT II
- POSITIVE PRESSURE TEST UL 10C
- 1/16" (1.6mm) 4# LEAD EQUIVALENT PROTECTION
- FIRELITE SIZES UP TO 36" X 89" (3,204 SQ INCH)
- WIRELITE SIZES UP TO 34 3/4" X 92" (3,289 SQ.IN. MAX)
- WIRELITE-NT IS DIAMOND PATTERN
- CUSTOMER RESPONSIBLE TO VERIFY LEAD SHIELDING REQUIREMENT PRIOR TO ORDERING
- LEAD SHIELDING MUST BE SPECIFIED BY PROJECT RADIATION PHYSICIST



UL FILE #R38927

NTS

Terms of Use: Certain designs and concepts are the exclusive proprietary property and work product of Ray-Bar Engineering provided in good faith as a courtesy for the architectural design of projects specifying, incorporating and utilizing genuine Ray-Bar products and assemblies. Ray-Bar designs are not to be copied, altered, plagiarized or utilized in any competitive or detrimental manner against Ray-Bar as protected by law and/or copyrights. "All Rights Reserved"

© 2019 Ray-Bar Engineering Corporation. * Ray-Bar is a registered trademark of Ray-Bar Engineering Corp. * FireLite and FireLite Plus are registered trademarks of NEG Co, Ltd. * Pilkington Pyrostop is a registered trademark of Pilkington plc. * WireLite and Fireglass are registered trademarks of TGP. * For additional information and details please contact Ray-Bar



JOB NAME: _____

LOCATION: _____

ROOM NUMBER: _____

SHEET ____ OF ____:

RAY-BAR ENGINEERING CORP.
 Toll Free: 1(800) 444-XRAY / 1(800) 444-9729
 Telephone: (626) 969-1818
 24 Hour Fax: 1(800) 333-XRAY / 1(800) 333-9729

SCALE
NTS

RAY-BAR FIRE RATED LEAD LINED VISION FRAME IGU

www.raybar.com

**RAY-BAR
FR-LLVF**