


RAY-BAR BALLISTIC PANELS (HANDGUN)

UL 752 LEVEL 3 / NIJ IIIA (0108.01)

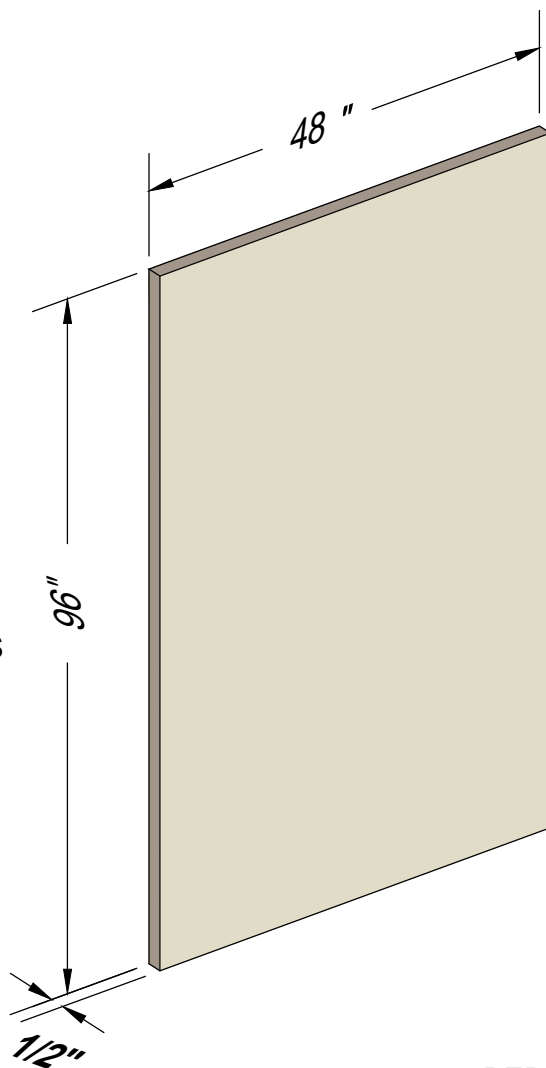

APPLICATIONS

- MILITARY
- RETAIL
- BANKS
- COURTHOUSES
- SCHOOLS
- SAFE ROOMS
- POLICE STATIONS

PHYSICAL PROPERTIES

- 1/2" THICK
- 5 1/4" POUNDS SQ. FOOT
- FIRE RESISTANT
- FLAT RIGID PANEL

ADVANTAGES

- AVAILABLE IN 1 TO 2 DAYS
- EASY TO INSTALL
- INSTALL OVER EXISTING WALLS

PERFORMANCE STANDARDS

- UL 752 LEVEL 3 (HANDGUN)
- NIJ IIIA 0108.01 (HANDGUN)
- RESISTANT HANDGUN UP TO .44 MAG
- 3 SHOTS IN 12"X12" AREA
- 1 HOUR FIRE RESISTANT ASTM E119
- RESISTANT TO FORCED ENTRY

IMPORTANT NOTES

- ALL JOINTS REQUIRE 2" + OVERLAP
- 4" WIDE BALLISTIC BATTEN STRIP AT VERTICAL JOINTS
- ALL PENETRATIONS MUST BE BALLISTIC BACKED

Terms of Use: Certain designs and concepts are the exclusive proprietary property and work product of Ray-Bar Engineering provided in good faith as a courtesy for the architectural design of projects specifying, incorporating and utilizing genuine Ray-Bar products and assemblies. Ray-Bar designs are not to be copied, altered, plagiarized or utilized in any competitive or detrimental manner against Ray-Bar as protected by law and/or copyrights. "All Rights Reserved"

	JOB NAME:
	LOCATION:
	ROOM NUMBER:
	SHEET ____ OF ____:
RAY-BAR BALLISTIC PANEL (HANDGUN)	

RAY-BAR ENGINEERING CORP.		SCALE NTS BRP-3
Toll Free: 1(800) 444-XRAY / 1(800) 444-9729		
Telephone: (626) 969-1818		
24 Hour Fax: 1(800) 333-XRAY / 1(800) 333-9729		
website: www.raybar.com		